



For more information about QUANTUM, you can do one of the following:

- Scan the QR code above
- Call 734-794-1882
- Visit [TheRide.org](http://TheRide.org)
- E-mail [Planning@TheRide.org](mailto:Planning@TheRide.org)


- 中文译文:如果您想把这个翻译成中文, 请发电子邮件给我们。
- 한국어 번역: 이것을 한국어로 번역하길 원하시면 저희에게 이메일 주시기 바랍니다.
- Si desea traducir el contenido a español, envíenos un mensaje de correo electrónico.



Ann Arbor Area Transportation Authority  
Dawn Gabay Operations Center  
2700 S. Industrial Hwy. | Ann Arbor, MI 48104  
734-996-0400 | [TellUs@TheRide.org](mailto:TellUs@TheRide.org)



@CatchTheRide

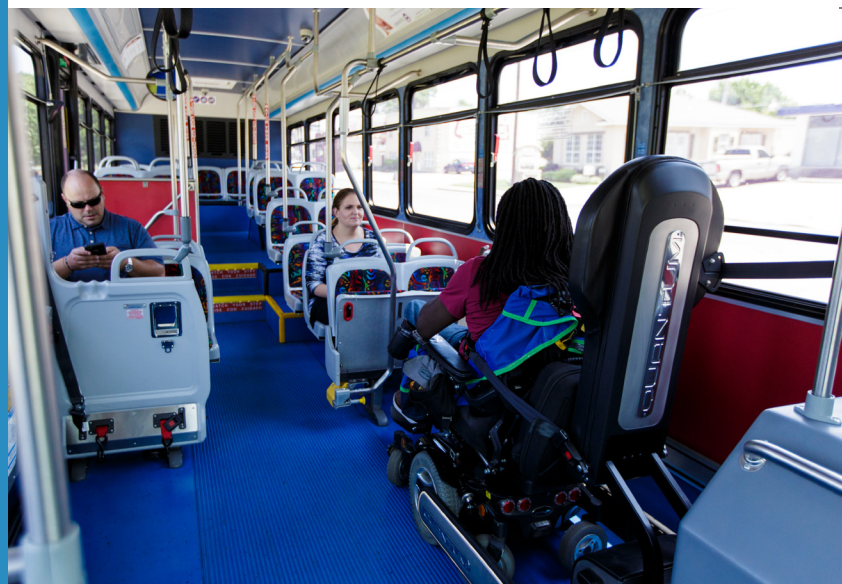

# QUANTUM Wheelchair

## Securement User Guide



**TheRide**

Ann Arbor Area Transportation Authority


## How to use **QUANTUM**:

# Creating Better Connections with **QUANTUM**

The **QUANTUM** wheelchair securements are virtually autonomous, granting you the independence of being able to secure your wheelchair on your own with an easy push button, so you can get to your destination quicker! Our Motor Coach Operators are trained to assist when requested.



Funded by the Michigan Mobility Challenge, TheRide has installed **QUANTUM** wheelchair securements on 10 of our buses.

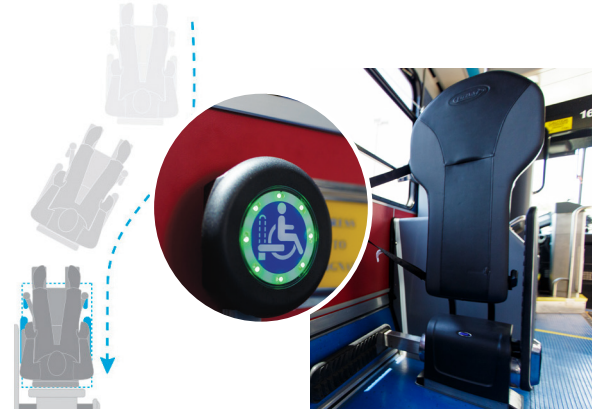

1. Back into the space with your wheelchair or scooter, centering it against the backrest, and engage the automatic locking sequence by pressing an ADA-friendly button.



2. Once the button is pushed, **QUANTUM's** arms safely secure the wheelchair in place; and continually adjust their grip as needed throughout your entire trip.



3. Once you are at your destination, press the button again to release so you can exit the bus.